


INSTALLATION

1. INSTALL NO. 1 ROOF WIRE (for Standard)

- (a) Apply new double-sided tape to the locations shown in the illustration while aligning the tape with the markings on the roof headlining.

Reference: Tape Attachment Locations

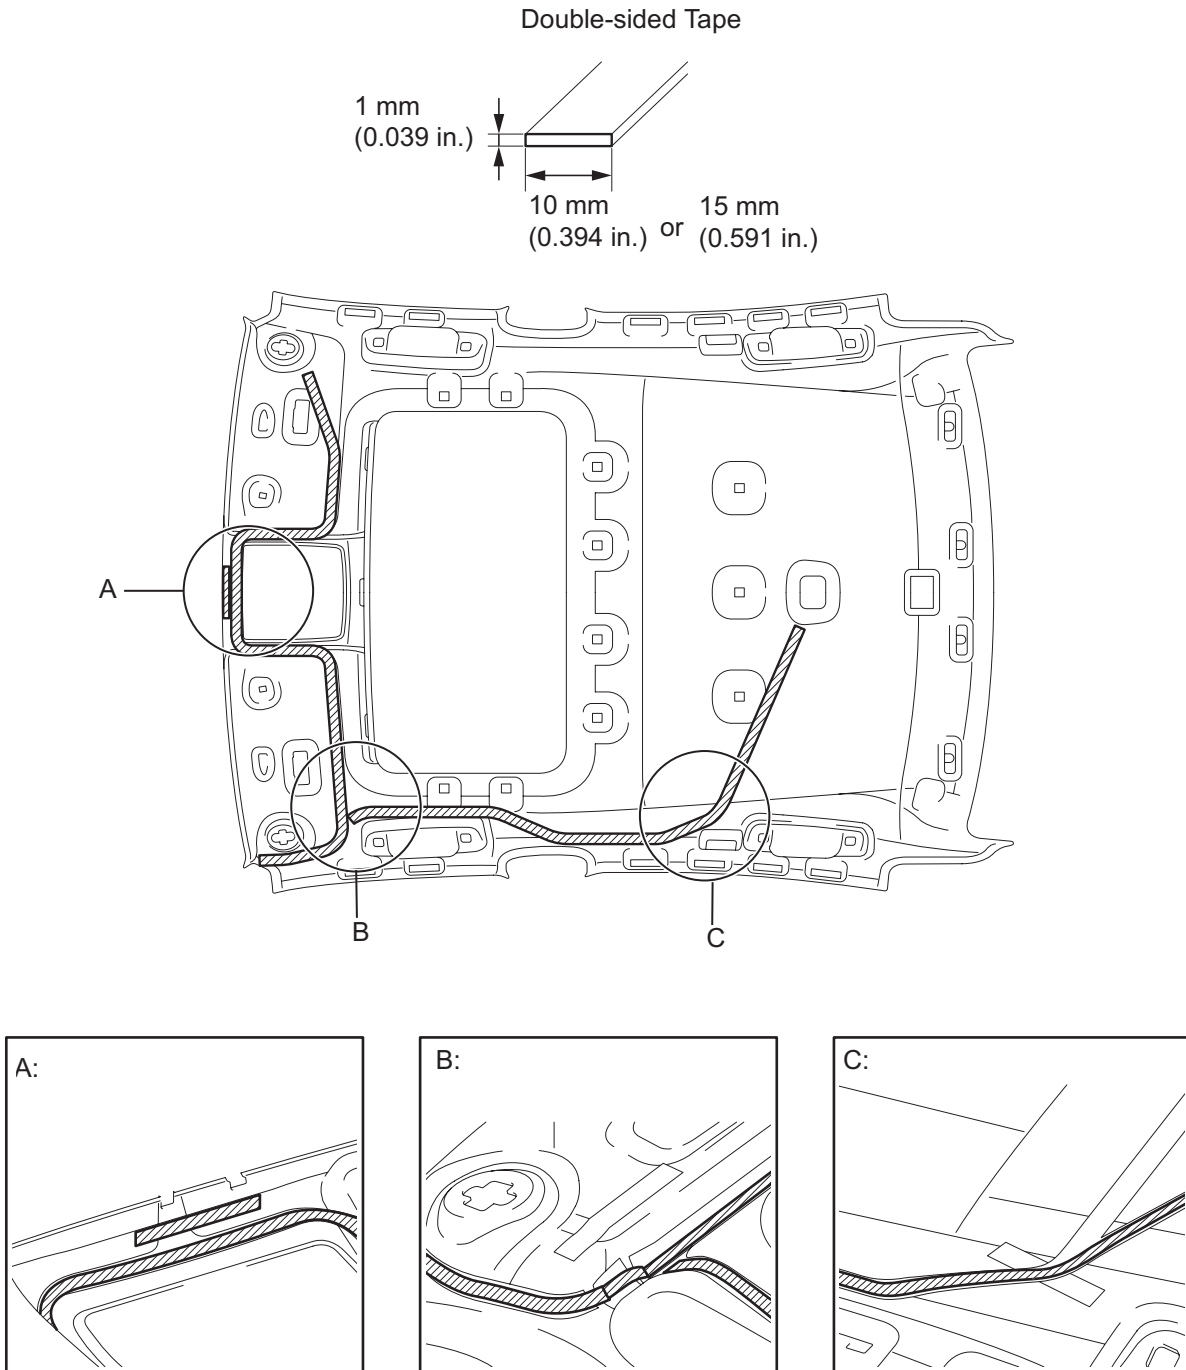

B147716E01


NOTICE:

Securely apply the double-sided tape to prevent the tape from being out of alignment and peeling off.

- (b) Peel off the release paper from the double-sided tape.
- (c) Attach the No. 1 roof wire along the double-sided tape so that the marking surface of the wire harness faces downward.

NOTICE:

- **Securely attach the No. 1 roof wire.**
 - **Failure to do so may cause abnormal noise.**
- (d) Turn the visor connectors clockwise approximately 90° to the connectors of the roof headlining.
 - (e) Apply adhesive tape to the locations shown in the illustration.

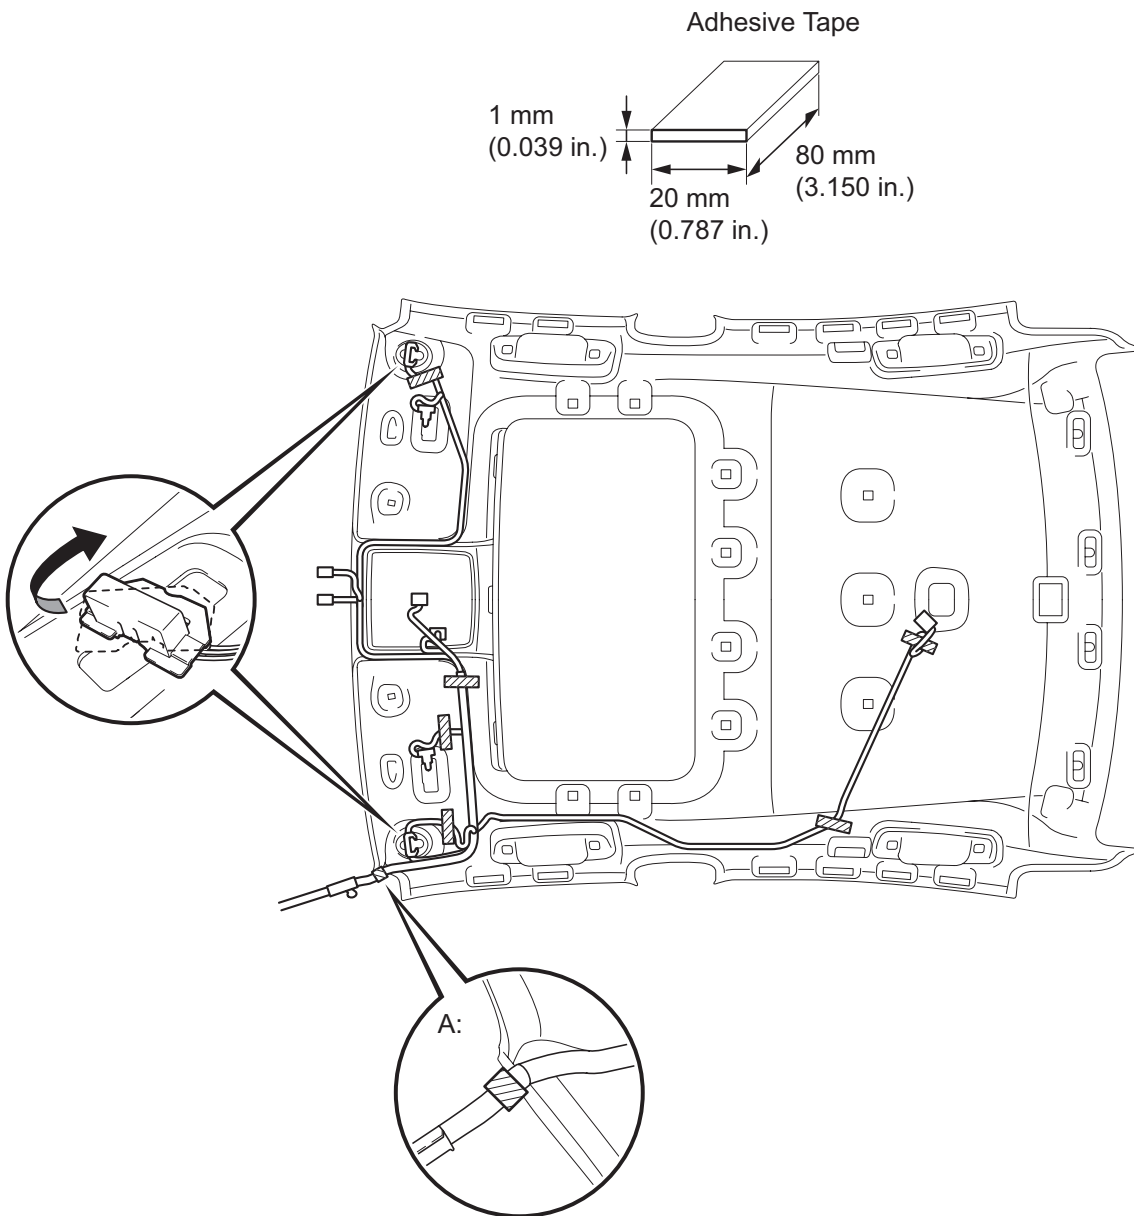Reference: Tape Attachment Locations


IR

HINT:

As shown at point A in the illustration, line up and secure the reference tape of the wire harness to the tip of the roof headlining assembly.

2. INSTALL NO. 1 ROOF WIRE (for Glass Roof)

- (a) Apply new double-sided tape to the locations shown in the illustration while aligning the tape with the markings on the roof headlining.

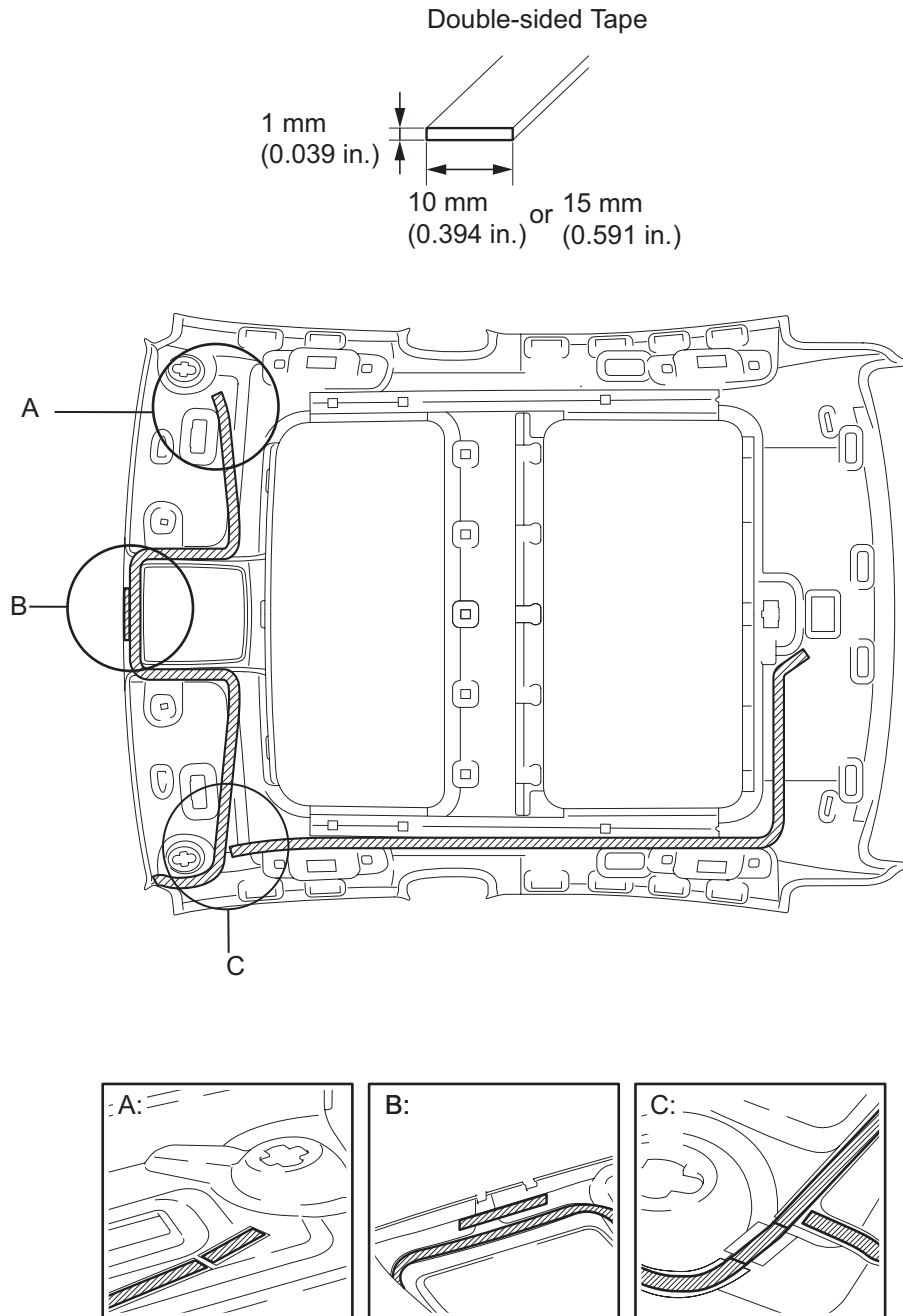Reference: Tape Attachment Locations

P

B147718E01

NOTICE:


Securely apply the double-sided tape to prevent the tape from being out of alignment and peeling off.

- (b) Peel off the release paper from the double-sided tape.

- (c) Attach the No. 1 roof wire along the double-sided tape so that the marking surface of the wire harness faces downward.

NOTICE:

- **Securely attach the No. 1 roof wire.**
 - **Failure to do so may cause abnormal noise.**
- (d) Turn the visor connectors clockwise approximately 90° to the connectors of the roof headlining.
- (e) Apply adhesive tape to the locations shown in the illustration.

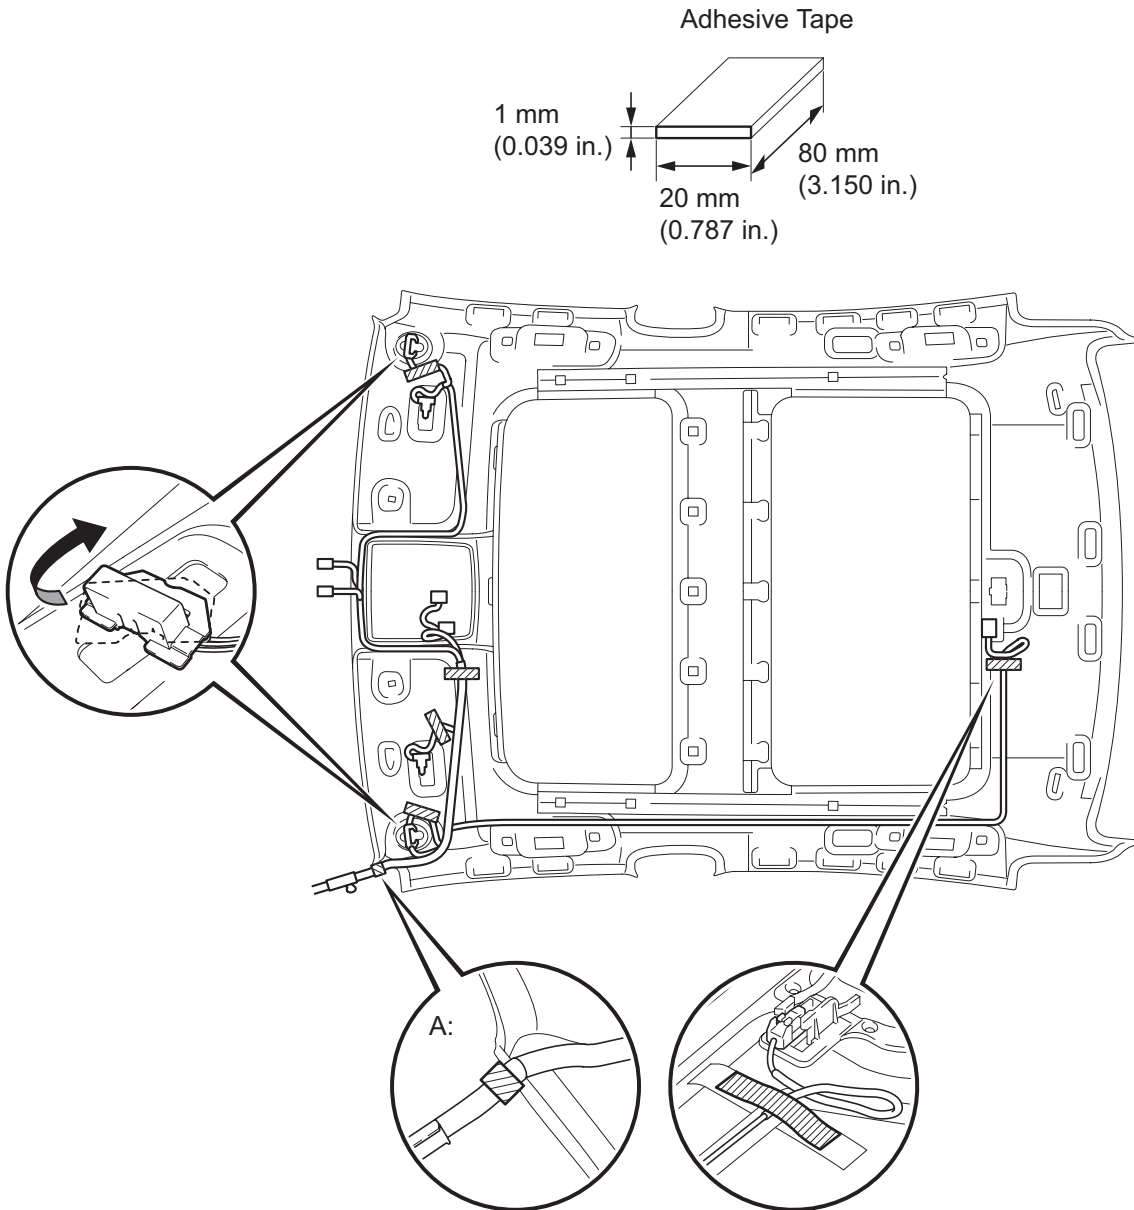
Reference: Tape Attachment Locations

P

B147719E01

HINT:


As shown at point A in the illustration, line up and secure the reference tape of the wire harness to the tip of the roof headlining assembly.

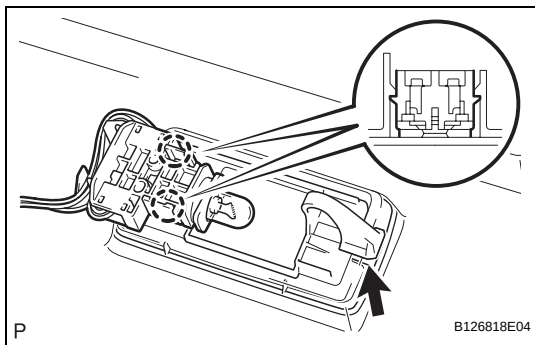**3. INSTALL VANITY LIGHT ASSEMBLY**

- (a) Install the vanity light to the roof headlining.
- (b) Connect the 2 claws to install the bulb holder.



HINT:

Use the same procedure to install the light on the other side.

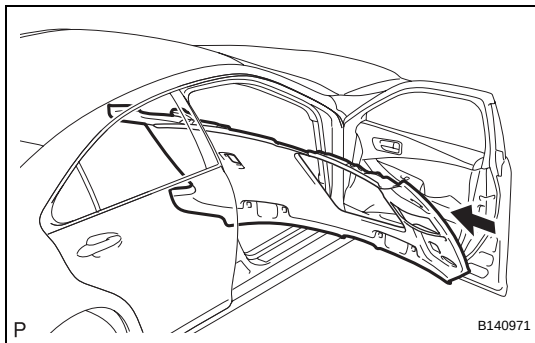4. INSTALL ANTENNA CORD SUB-ASSEMBLY (See page [AV-224](#))**5. INSTALL ROOF HEADLINING ASSEMBLY (for Standard)**

- (a) Pull the roof headlining assembly into the vehicle through the front right door.
- (b) Engage the 12 claws, 4 clips, and 11 fasteners.
- (c) Connect the antenna cord sub-assembly connector and engage the clamp to the rear pillar RH.
- (d) Connect the antenna cord sub-assembly connector and engage each clamp to the front pillar RH.


- (e) Connect the No. 1 wire connector and engage each clamp to the front pillar LH.

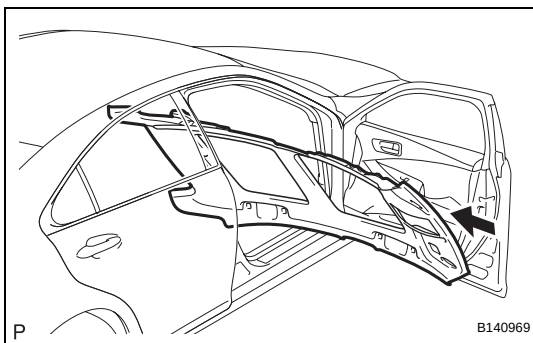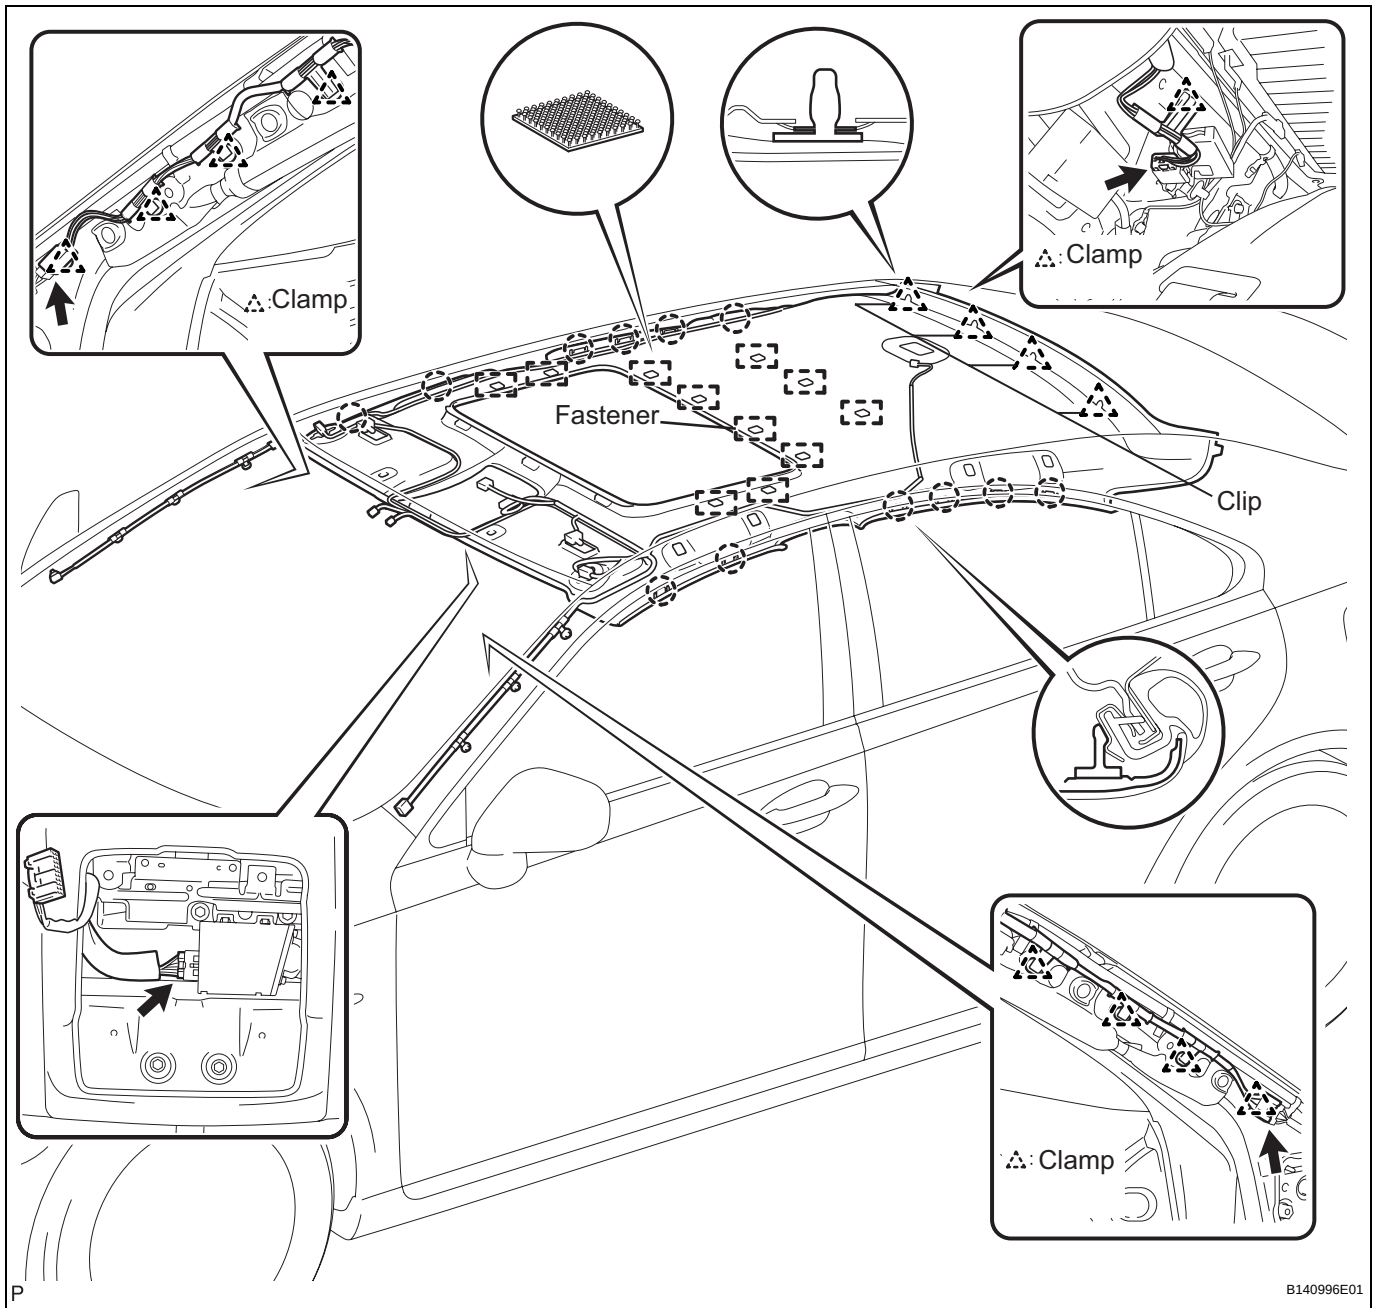

6. INSTALL ROOF HEADLINING ASSEMBLY (for Glass Roof)


- Pull the roof headlining assembly into the vehicle through the front right door.
- Engage the 12 claws, 4 clips, and 21 fasteners.
- Connect the antenna cord sub-assembly connector and engage the clamp to the rear pillar RH.
- Connect the antenna cord sub-assembly connector and engage each clamp to the front pillar RH.

- (e) Connect the No. 1 wire connector and engage each clamp to the front pillar LH.

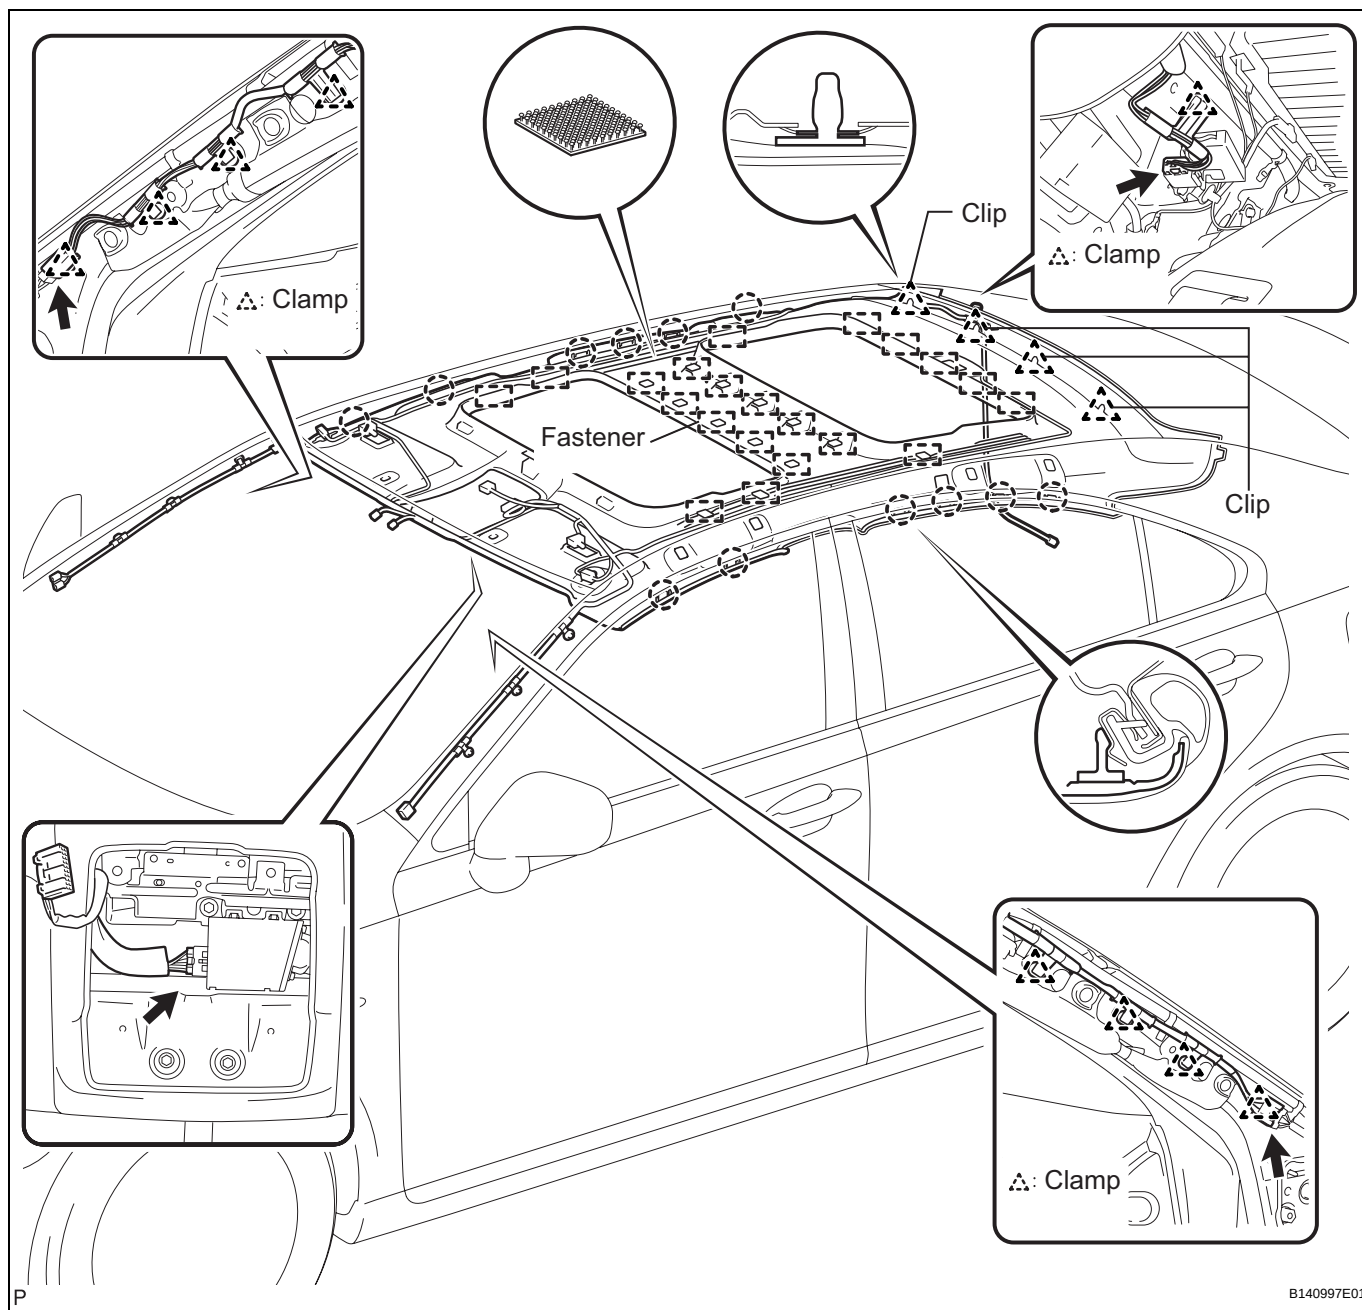


7. INSTALL ASSIST GRIP SUB-ASSEMBLY

- (a) Engage the 2 clips to an assist grip sub-assembly as shown in the illustration.

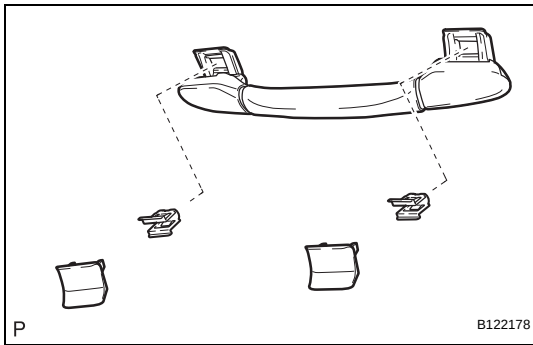


- (b) Install the assist grip sub-assembly.
 - (c) Install the 2 assist grip covers to the assist grip sub-assembly.
- HINT:
Use the same procedure for the other 3 assist grips.

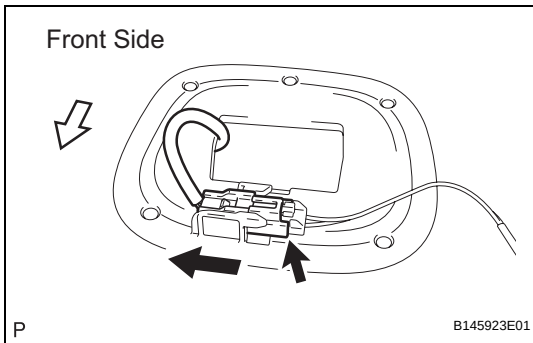


8. INSTALL SPOT LIGHT ASSEMBLY (for Standard)

- (a) Connect the connector.

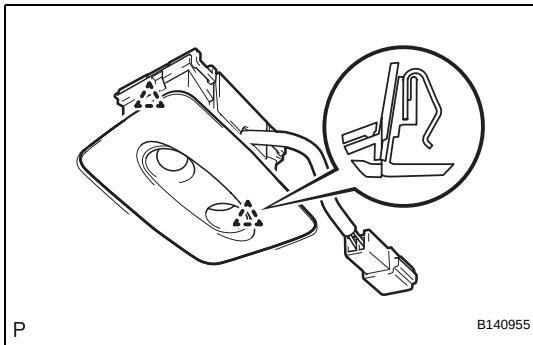


- (b) Engage the 2 clips and install the spot light assembly.

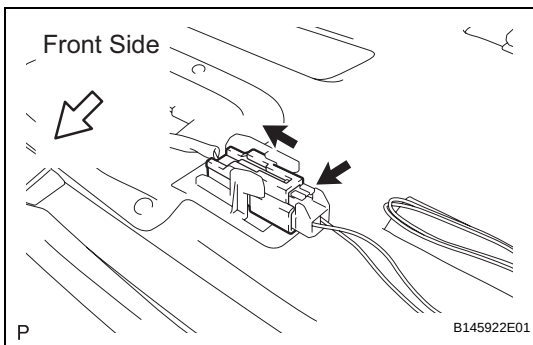


9. INSTALL SPOT LIGHT ASSEMBLY (for Glass Roof)

- (a) Connect the connector.

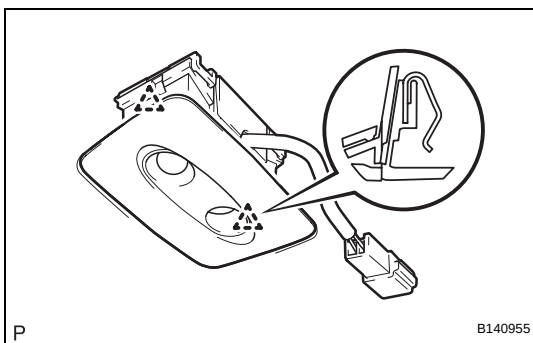


- (b) Engage the 2 clips and install the spot light assembly.

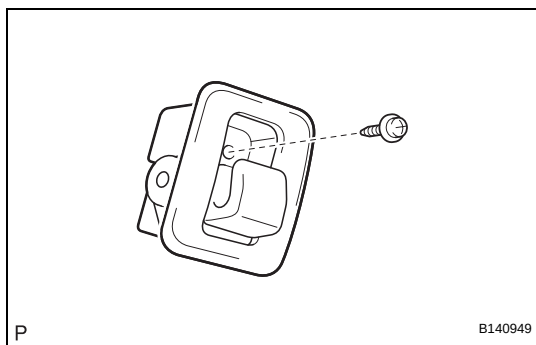**10. INSTALL COAT HOOK**

- (a) Install the coat hook with the screw.

HINT:

Use the same procedure to install the hook on the other side.

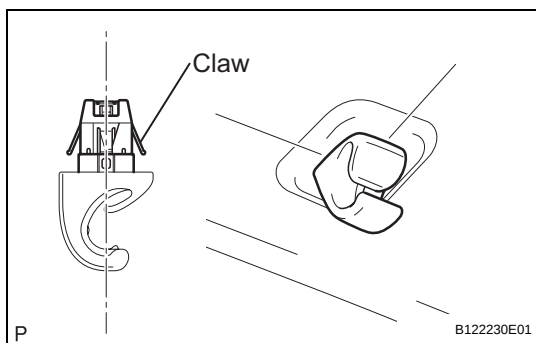
**11. INSTALL VISOR HOLDER**

- (a) Set the claws of the visor holder as shown in the illustration.

- (b) Engage the claws and install the visor holder.

HINT:

Use the same procedure to install the holder on the other side.

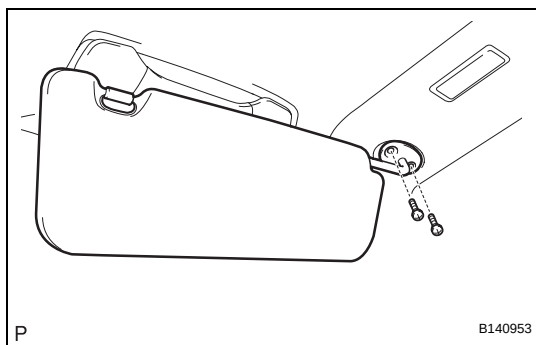
**12. INSTALL VISOR ASSEMBLY LH**

- (a) Install the visor assembly LH with the 2 screws.

13. INSTALL VISOR ASSEMBLY RH

HINT:


Use the same procedure for the RH side and the LH side.

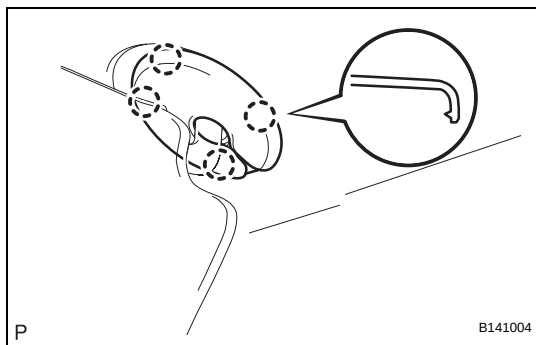**14. INSTALL VISOR BRACKET COVER**

- (a) Engage the 4 claws and install the visor bracket cover.


HINT:

Use the same procedure to install the cover on the other side.

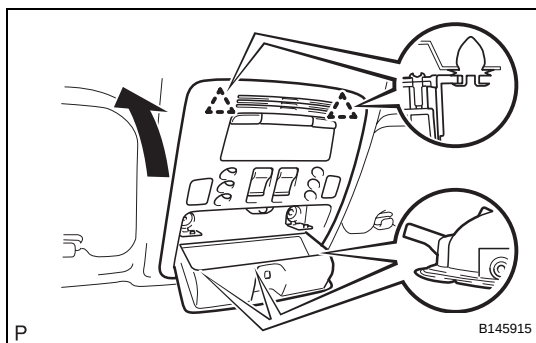**15. INSTALL ROOF CONSOLE BOX ASSEMBLY**


- (a) Connect the connector.

- (b) Engage the 2 clips.

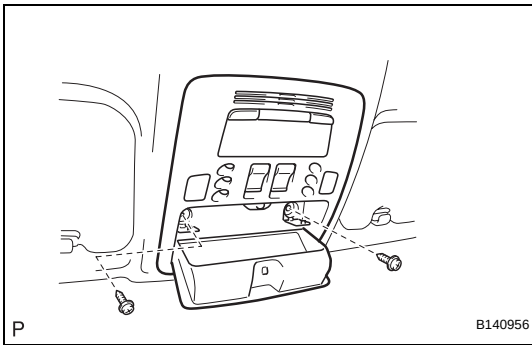


- (c) Install the roof console box assembly with the 2 screws.

16. **INSTALL RAIN SENSOR COVER (w/ Rain Sensor)**
(See page [WW-65](#))
17. **INSTALL INNER REAR VIEW MIRROR STAY HOLDER COVER** (See page [MI-44](#))

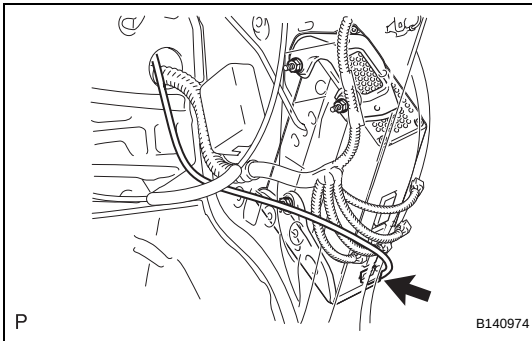



18. **CONNECT STEREO COMPONENT AMPLIFIER ASSEMBLY CONNECTOR (w/ DVD Player)**
(a) Connect the stereo component amplifier assembly connector.
19. **INSTALL LUGGAGE COMPARTMENT INNER TRIM COVER RH (w/ DVD Player)** (See page [ED-88](#))
20. **INSTALL REAR FLOOR FINISH PLATE (w/ DVD Player)** (See page [ED-88](#))
21. **INSTALL NO. 1 LUGGAGE COMPARTMENT TRIM HOOK (w/ DVD Player)** (See page [ED-89](#))
22. **INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY (w/ DVD Player)** (See page [ED-89](#))
23. **INSTALL SPARE WHEEL COVER TRAY (w/ DVD Player)**
24. **INSTALL LUGGAGE COMPARTMENT FLOOR MAT (w/ DVD Player)**
25. **INSTALL FLOOR CARPET BRACKET LH**
26. **INSTALL FLOOR CARPET BRACKET RH**
27. **INSTALL SHIFT LEVER ASSEMBLY** (See page [AX-240](#))
28. **CONNECT TRANSMISSION CONTROL CABLE ASSEMBLY** (See page [AX-241](#))
29. **INSTALL NO. 2 CONSOLE BOX DUCT** (See page [AC-163](#))
30. **INSTALL NO. 3 CONSOLE BOX DUCT** (See page [AC-163](#))
31. **INSTALL REAR CONSOLE BOX ASSEMBLY** (See page [IP-39](#))
32. **INSTALL CONSOLE REAR END PANEL SUB-ASSEMBLY** (See page [IP-40](#))
33. **INSTALL CONSOLE BOX CARPET** (See page [IP-41](#))
34. **INSTALL CONSOLE BOX POCKET** (See page [IP-41](#))
35. **INSTALL HEATER SEAT SWITCH CONSOLE BASE (w/o Seat Heater System)** (See page [IP-41](#))

36. INSTALL HEATER SEAT SWITCH CONSOLE BASE (w/ Seat Heater System) (See page [IP-41](#))
37. INSTALL UPPER CONSOLE PANEL ASSEMBLY WITH FRONT ASH RECEPTACLE (See page [IP-42](#))
38. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (See page [IP-42](#))
39. INSTALL INSTRUMENT PANEL FINISH PANEL END LH (See page [IP-46](#))
40. INSTALL INSTRUMENT PANEL FINISH PANEL END RH (See page [IP-44](#))
41. INSTALL ROOF SIDE INNER GARNISH ASSEMBLY LH
 - (a) Engage the claw and 5 clips, and install the roof side inner garnish assembly LH.

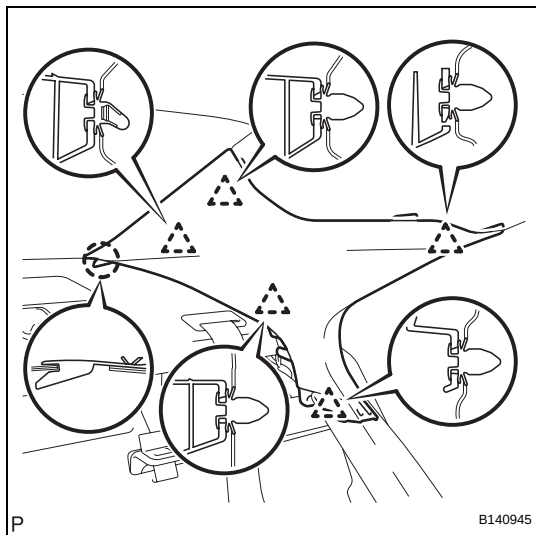


42. INSTALL REAR SEAT SIDE GARNISH LH (w/o Rear Seat Side Airbag)
 - (a) Install the 4 claws and install the rear seat side garnish LH.
43. INSTALL REAR SEAT SIDE AIRBAG ASSEMBLY LH (w/ Rear Seat Side Airbag) (See page [RS-460](#))

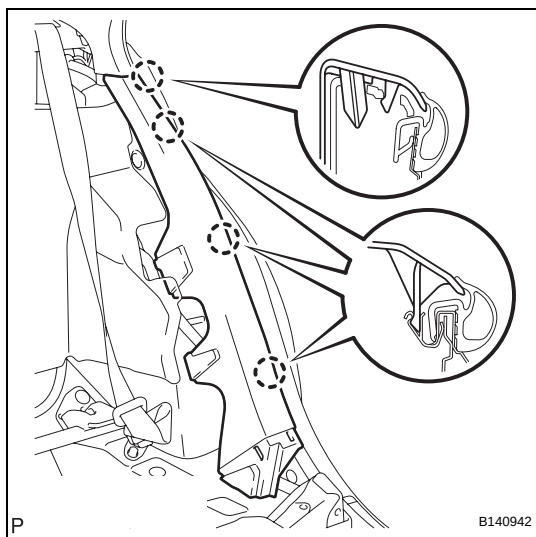

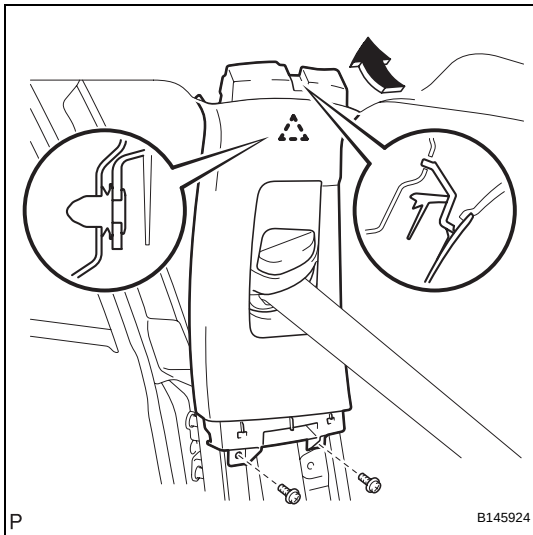


44. INSTALL UPPER CENTER PILLAR GARNISH LH

- (a) Engage the clip.
- (b) Install the upper center pillar garnish LH with the 2 screws.

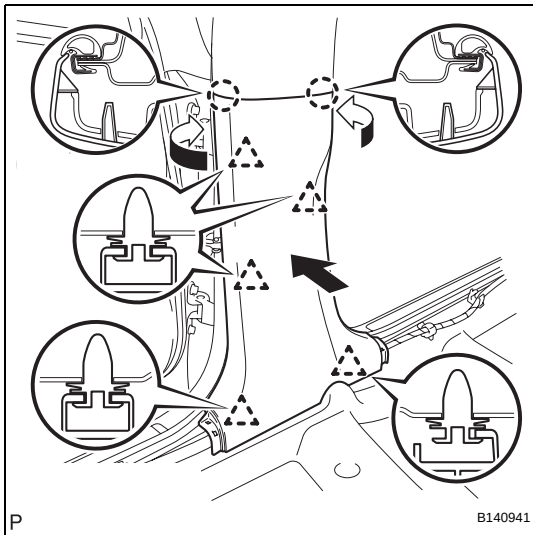


45. INSTALL LOWER CENTER PILLAR GARNISH LH

- (a) Engage the 5 clips and 2 claws, and install the lower center pillar garnish LH.

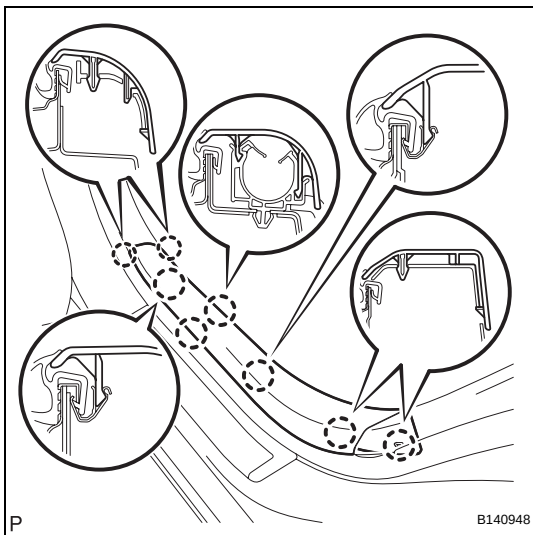


46. INSTALL REAR DOOR SCUFF PLATE LH


- (a) Engage the 8 claws, then install the rear door scuff plate LH.

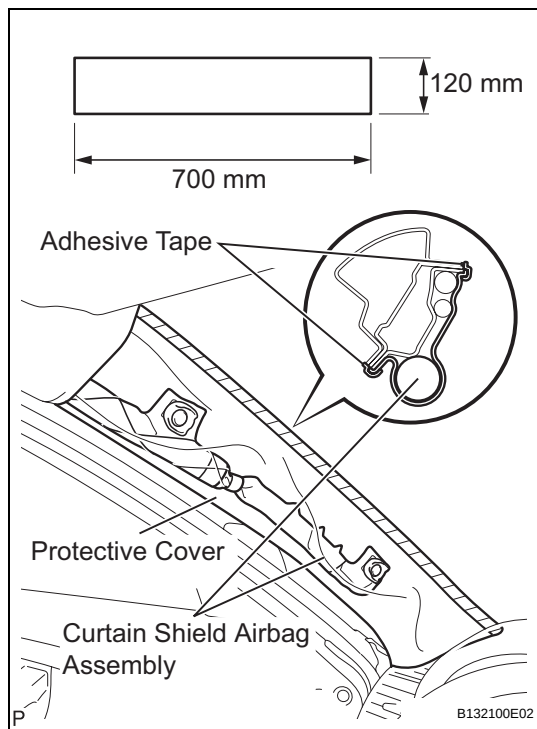**47. INSTALL FRONT PILLAR GARNISH LH**


- (a) Remove the protective cover.

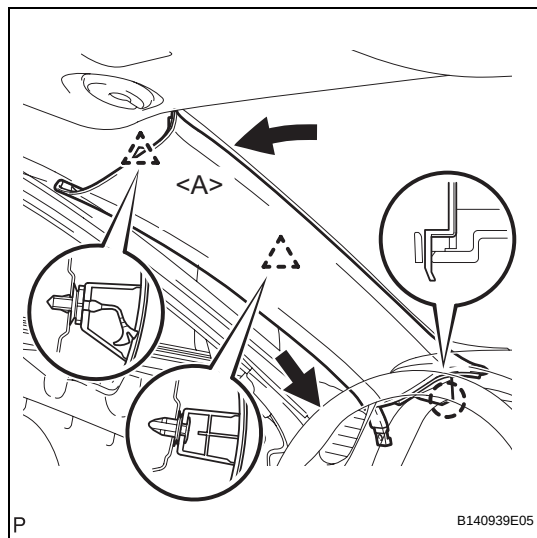

- (b) Install a new clip <A> on the front pillar garnish LH.
(c) Engage the claw and 2 clips, then install the front pillar garnish LH.

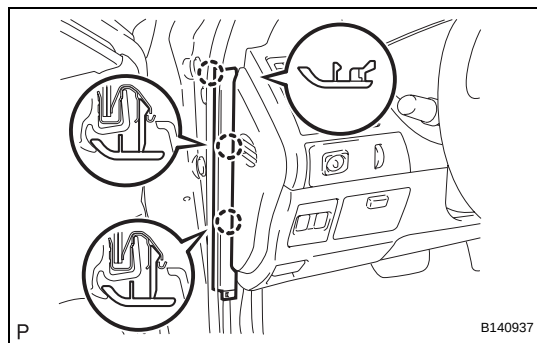48. INSTALL SIDE INSTRUMENT PANEL LH (See page [IP-47](#))**49. INSTALL FRONT DOOR OPENING TRIM COVER LH**

- (a) Engage the 3 claws and install the front door opening trim cover LH.

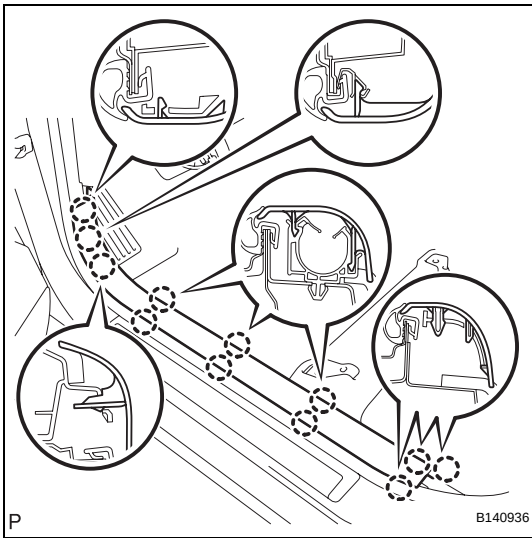**50. INSTALL FRONT DOOR SCUFF PLATE LH**

- (a) Engage the 12 claws, and install the front door scuff plate LH.

51. INSTALL ROOF SIDE INNER GARNISH ASSEMBLY RH

HINT:

Use the same procedure for the RH side and the LH side.

52. INSTALL REAR SEAT SIDE GARNISH RH (w/o Rear Seat Side Airbag)

HINT:

Use the same procedure for the RH side and the LH side.

53. INSTALL REAR SEAT SIDE AIRBAG ASSEMBLY RH (w/ Rear Seat Side Airbag)

HINT:

Use the same procedure for the RH side and the LH side.

54. INSTALL UPPER CENTER PILLAR GARNISH RH

HINT:

Use the same procedure for the RH side and the LH side.

55. INSTALL LOWER CENTER PILLAR GARNISH RH

HINT:

Use the same procedure for the RH side and the LH side.

56. INSTALL REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedure for the RH side and the LH side.

57. INSTALL FRONT PILLAR GARNISH RH

HINT:

Use the same procedure for the RH side and the LH side.

58. INSTALL SIDE INSTRUMENT PANEL RH (See page [IP-43](#))**59. INSTALL FRONT DOOR OPENING TRIM COVER RH**

HINT:

Use the same procedure for the RH side and the LH side.

60. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedure for the RH side and the LH side.

61. INSTALL FRONT SEAT ASSEMBLY LH (See page [SE-109](#))**62. INSTALL FRONT SEAT REAR OUTER TRACK BRACKET COVER LH (See page [SE-110](#))**

63. INSTALL FRONT SEAT REAR INNER TRACK BRACKET COVER LH (See page [SE-110](#))
64. INSTALL FRONT SEAT OUTER TRACK BRACKET COVER LH (See page [SE-110](#))
65. INSTALL FRONT SEAT INNER TRACK BRACKET COVER LH (See page [SE-110](#))
66. CONNECT FRONT SEAT OUTER BELT ASSEMBLY LH (See page [SB-25](#))
67. INSTALL SEAT BELT ANCHOR COVER CAP LH (See page [SB-25](#))
68. INSTALL FRONT SEAT HEADREST ASSEMBLY (for Driver Seat)
69. INSTALL FRONT SEAT ASSEMBLY RH (See page [RS-497](#))
70. INSTALL FRONT SEAT REAR OUTER TRACK BRACKET COVER RH (See page [RS-498](#))
71. INSTALL FRONT SEAT REAR INNER TRACK BRACKET COVER RH (See page [RS-498](#))
72. INSTALL FRONT SEAT OUTER TRACK BRACKET COVER RH (See page [RS-498](#))
73. INSTALL FRONT SEAT INNER TRACK BRACKET COVER RH (See page [RS-498](#))
74. CONNECT FRONT SEAT OUTER BELT ASSEMBLY RH (See page [RS-499](#))
75. INSTALL SEAT BELT ANCHOR COVER CAP RH (See page [RS-499](#))
76. INSTALL FRONT SEAT HEADREST ASSEMBLY (for Front Passenger Seat)
77. INSTALL REAR SEATBACK ASSEMBLY (See page [SE-121](#))
78. INSTALL REAR CENTER SEAT HEADREST ASSEMBLY
79. INSTALL REAR SEAT HEADREST ASSEMBLY
80. INSTALL REAR SEAT CUSHION ASSEMBLY (See page [SE-121](#))
81. PERFORM INITIALIZATION
NOTICE:
Some systems need initialization after reconnecting the cable to the negative battery terminal (See page [IN-33](#)).
82. INSPECT SHIFT LEVER POSITION (See page [AX-200](#))
83. ADJUST SHIFT LEVER POSITION (See page [AX-200](#))
84. INSPECT FRONT SEAT ASSEMBLY (See page [SE-110](#))

85. INSPECT SRS WARNING LIGHT

(See page [RS-37](#))